

# TP-8083IP

## Operating Instructions

Please Read Before Use

### FEATURES

- ◇ IP AUTO DIALING FUNCTION
- ◇ CALLER ID WITH FSK/DTMF DUAL SYSTEM
- ◇ 50 IN-COMING CALL MEMORY
- ◇ 30 OUT-GOING CALL MEMORY
- ◇ CALENDAR AND REAL-TIME CLOCK
- ◇ 5 STEP LCD CONTRAST ADJUST
- ◇ 8 ONE-TOUCH MEMORY
- ◇ REDIAL FUNCTION
- ◇ FLASH FUNCTION ( Adjustable )
- ◇ HOLD WITH MUSIC FUNCTION
- ◇ KEY LOCK FUNCTION
- ◇ SPEAKER PHONE
- ◇ TONE/PULSE SELECTION
- ◇ SPEAKER VOLUME ADJUST
- ◇ RINGER VOLUME ADJUST

### PACKING LIST

- TELEPHONE BASE
- HANDSET
- LINE CORD
- USER'S MANUAL
- WARRANTY CARD

## INSTALLATION

- Plug coiled cord into handset modular jack. Plug the other end into the jack at the left side of the telephone.
- Plug line cord into jack at the rear of telephone base, the other end of the line cord is for connecting telephone line wall jack.
- Caller ID function is available only after you apply this service to the local telecom bureau.
- Troubleshooting: If the functions are not correct, please take out the battery and unplug the line cord from the telephone for ten minutes.

## SYSTEM SETTING

At on-hook state, press “SET/STORE” key to enter the programming mode, LCD will show the setting items. Press the “UP” or “DOWN” key to select the setting item and press “SET/STORE” key again to change the value. You can press “UP”, “DOWN” or numeric key to input the value then press “SET/STOTE” key to confirm.. You can leave the set mode at any time with press “Delete” or “Speaker” key.

## DATE AND TIME SETTING

When “SET 1 DATE” show on display, press “SET” to adjust the date and time start from month, input the right value by numeric key , then press “SET” to confirm.

## AREA CODE SETTING

When “SET 2 COdE” show on display, press “SET” to input the area code up to 5 digits, LCD will display “CODE -----”, input the right value by “UP” or “DOWN” key , then press “SET” to confirm. After setting the area code, it will not display the area code when receiving a local call. It is convenient to use for the call back of this local number.

## PABX DIALING CODE SETTING

When “SET 3 PCODE” show on display , press “SET” to input the Dialing Code up to 2 digits, LCD will display “PCODE - -”, input the right value of line access code by “UP” or “DOWN” key, then press “SET” to confirm.

**Remark: If using in PABX system, you must set the Dialing code for convenient of IP dialing.  
If using in direct line, must cancel this dialing code.**

## IP NUMBER SETTING

When “SET 4 IP” show on display press “SET” and “UP” or “DOWN” key to input the Auto and Manual IP Setting.

When LCD will display “1 Auto IP”, press “Set” to change the setting then press “UP” or “Down” Key to turn on or off the IP service and press “SET” to confirm and follow by input the IP Gateway Number and press “Set” key to confirm.

For manual IP number, when “2 IP1” show on display, press “SET” and input the manual IP number that you want and press set to confirm.

You may input a pause between Gateway Number and password by “PAUSE” key.

## DIALING MODE SETTING

When “SET 6 P-t” show on display, press “SET” and follow by “UP” or “DOWN” key to change from Tone or Pulse Dialing, then press “SET” to confirm.

## PREVENT PARALLEL PHONE SETTING

When “SET 7 PPP” show on display, press “SET” and follow by “UP” or “DOWN” key to change from Tone or Pulse Dialing, then press “SET” to confirm.

## **ANSWERING CALL**

When the phone rings, simply lift up the handset or press “speaker” key to answer call. When the call is finish hang up by placing the handset back in the cradle or press “speaker” key again.

## **CALLER ID FUNCTION**

- When receiving a phone call, the telephone will display the calling number and the current date and time display will also be updated.
- You can use UP or DOWN key to check the incoming call information including number, date and time, and you can direct dial back with REDIAL key.
- When you check the incoming call memories, press DELETE key to erase the unwanted memory. If you press and hold DELETE key for more than 3 seconds, all memories will be deleted.

## **MAKING CALL**

Pick up the handset or press “SPEAKER” key, you will hear a dialing tone, press the desired number. The LCD will display the number you dialed and call duration time after 5 seconds.

When finished, return the handset to the cradle or press “SPEAKER” key again.

## **REDIAL FUNCTION**

If line is engaged, press REDAIL key for redial. The telephone will dial the last dialed number automatically.

## **PREDIALING FUNCTION**

At on-hook state, you can key in the calling number and edit the input mistake with the “DEL” key. After that, press REDIAL to dial out.

## **AUTO IP FUNCTION**

The AUTO IP function is specially designed either the post-paid or IP card customer, it includes 4 IP address. When you make a call headed with digit 0, the system will decide to go IP automatically after programming.

## **MANUAL IP DIALING**

When OFF-HOOK, press “IP” key and the phone will dial the IP gateway number automatically.

## **DIALED NUMBER CHECK**

- You can check the last 30 dialed numbers and the conversation duration with the OUT key, If you want to make call to that number showed on display, press Redial key once.
- When you check the dialed call memories, press DELETE key to delete the unwanted Memory. If you press DELETE key and do not release for more than 3 seconds, all memories will be deleted.

## **ADJUST THE SPEAKER VOLUME**

When in speaker mode, Press “VOL” key to adjust the speaker volume as your needs. There are two levels of volume control.

## **ADJUST THE RINGER VOLUME**

Slide the ringer switch at the back of the phone to “High” or “Low” according your needs.

## **LCD CONTRAST**

When on hook, Press “BRIGHT” key to adjust the LCD Display contrast as your needs.

### **3- POSITION LOCK**

There are 3- position for lock all(yellow point), lock 0(green point), open( red point).

### **HOLD ON MUSIC FUNCTION**

During your phone conversation, if you want a private conversation not to be heard by the other party on the line, you can press “HOLD” key and place the handset in the cradle. Musical tone will be heard by the caller. To resume the phone call, you only need to pick up the handset and talk.

### **HOLD ON MUSIC FUNCTION**

During your phone conversation, if you want a private conversation not to be heard by the other party on the line, you can press “HOLD” key and place the handset in the cradle. Musical tone will be heard by the caller. To resume the phone call, you only need to pick up the handset and talk.

### **MEMORY FUNCTION**

1. To store the phone number, when phone is on hook, input the telephone number then press “STORE” and memory location (M1~M8).
2. To erase the memory, press ## follow by “STORE” key and memory location (M1~M8).
3. To make call, on hook or lift the handset, press the phone number memory location (M1~M8).